


ROBOTICS

Product specification

IRB 140

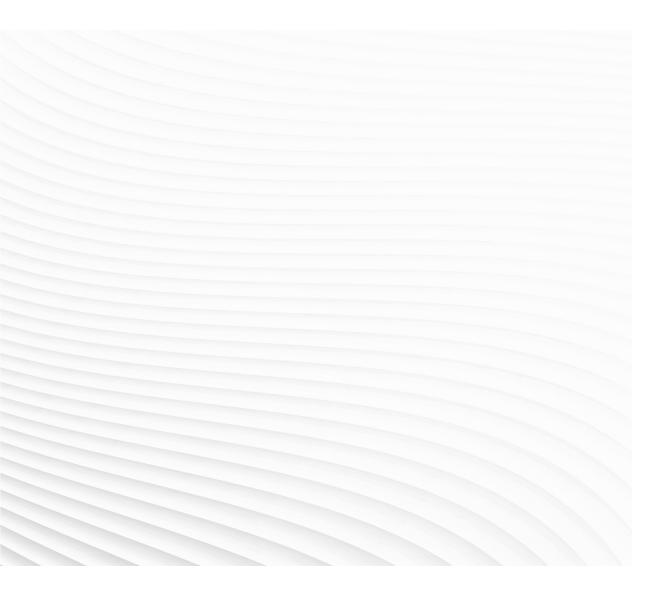

Trace back information: Workspace R18-2 version a10 (not checked in) Published 2018-10-10 at 09:44:14 Skribenta version 5.3.008

Product specification

IRB 140-6/0.8 IRB 140T-6/0.8

Document ID: 3HAC041346-001 Revision: N

© Copyright 2004-2018 ABB. All rights reserved. Specifications subject to change without notice.

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damages to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2004-2018 ABB. All rights reserved. Specifications subject to change without notice.

ABB AB, Robotics Robotics and Motion Se-721 68 Västerås Sweden

Table of contents

	Over	view of this product specification	7
1	Desc	ription	9
	1.1	Structure	9
		1.1.1 Introduction	9
		1.1.2 Different robot versions	12
	1.2	Standards	14
		1.2.1 Applicable standards	14
	1.3	Installation	16
		1.3.1 Introduction	16
		1.3.2 Operating requirements	17
	1.4	Load diagram	21
		1.4.1 Introduction	21
		1.4.2 Diagrams	22
		1.4.3 Maximum load and moment of inertia for full and limited axis 5 (center line down)	
		movement	23
		1.4.4 Maximum TCP acceleration	24
	1.5	Mounting of equipment	25
		1.5.1 Introduction	25
		1.5.2 Holes for mounting of extra equipment	26
	1.6	Calibration and references	28
		1.6.1 Fine calibration	28
		1.6.2 Absolute Accuracy calibration	29
	1.7	Maintenance and troubleshooting	31
		1.7.1 Introduction	31
	1.8	Robot motion	32
		1.8.1 Introduction	32
		1.8.2 Performance according to ISO 9283	34
		1.8.3 Velocity	36
		1.8.4 Robot stopping distances and times	37
		1.8.5 Signals	38
		-	
2	Spec	ification of variants and options	39
	2.1	Introduction to variants and options	39
	2.2	Manipulator	40
	2.3	Floor cables	42
	2.4	Process	43
	2.5	User documentation	44
3	Acce	ssories	45
-			
	3.1	Introduction to accessories	45
Inc	lex		47

This page is intentionally left blank

Overview of this product specification

About this product specification

It describes the performance of the manipulator or a complete family of manipulators in terms of:

- · The structure and dimensional prints
- · The fulfilment of standards, safety and operating requirements
- The load diagrams, mounting of extra equipment, the motion and the robot reach
- · The specification of variant and options available

Usage

Product specifications are used to find data and performance about the product, for example to decide which product to buy. How to handle the product is described in the product manual.

Users

It is intended for:

- Product managers and product personnel
- · Sales and marketing personnel
- Order and customer service personnel

References

Reference	Document ID
Product specification - Controller IRC5 IRC5 with main computer DSQC1000.	3HAC047400-001
<i>Product specification - Controller software IRC5</i> IRC5 with main computer DSQC1000 and RobotWare 5.6x.	3HAC050945-001
<i>Product specification - Controller software IRC5</i> IRC5 with main computer DSQC1000 and RobotWare 6.	3HAC050945-001
Product manual - IRB 140	3HAC027400-001
Product specification - Robot user documentation, IRC5 with RobotWare 6	3HAC052355-001

Revisions

Revision	Description
-	 Replaces article numbers 3HAC9041-1, 3HAC9885-1, 3HAC10320-1, 3HAC10319-1, 3HAC10323-1, and 3HAC9041-012.
A	 Machinery directive updated Figure of the base is updated, see <i>Illustration on page 19</i>.
В	Info regarding attachment bolts added
С	Minor corrections/update
D	Values for stop distance/time IRB 140 Std. added

Continued

Revision	Description
E	Text for ISO test adjusted
	 Robot stopping distances and times for category 0 and category 1 stops are moved to a separate document, Product specification - Robot stopping distances according to ISO 10218-1
F	Text for Foundry Plus updated.
G	Minor corrections/update
н	Minor corrections/update
J	• Illustration in section "Robot motion/Introduction" is change.
К	Published in release R17.1. The following updates are done in this revision: Restriction of load diagram added.
L	 Published in release R17.2. The following updates are done in this revision: Updated list of applicable standards. Updated inaccuracy in drawings of fastening
М	Published in release R18.1. The following updates are done in this revision:TCP acceleration should be presented by RobotStudio.
N	 Published in release R18.2. The following updates are done in this revision: Corrected option number to 435-88 for variant IRB 140T-6/0.8.

1.1 Structure

1.1.1 Introduction

General

IRB 140 is a 6-axis industrial robot, with a payload of 6 kg, designed specifically for manufacturing industries that use flexible robot-based automation. The robot has an open structure that is specially adapted for flexible use, and can communicate extensively with external systems.

Protection type Foundry Plus 2

Robots with the option Foundry Plus 2 are designed for harsh environments where the robot is exposed to sprays of coolants, lubricants and metal spits that are typical for die casting applications or other similar applications.

Typical applications are spraying insertion and part extraction of die-casting machines, handling in sand casting and gravity casting, etc. (Please refer to Foundry Prime robots for washing applications or other similar applications). Special care must be taken in regard to operational and maintenance requirements for applications in foundry are as well as in other applications areas. Please contact ABB Robotics Sales organization if in doubt regarding specific application feasibility for the Foundry Plus 2 protected robot.

The robot is painted with two-component epoxy on top of a primer for corrosion protection. To further improve the corrosion protection additional rust preventive are applied to exposed and crucial areas, e.g. has the tool flange a special preventive coating. Although, continuous splashing of water or other similar rust formation fluids may cause rust attach on the robots unpainted areas, joints, or other unprotected surfaces. Under these circumstances it is recommended to add rust inhibitor to the fluid or take other measures to prevent potential rust formation on the mentioned.

The entire robot is IP67 compliant according to IEC 60529 - from base to wrist, which means that the electrical compartments are sealed against water and solid contaminants. Among other things all sensitive parts are better protected than the standard offer.

Selected Foundry Plus 2 features:

- Improved sealing to prevent penetration into cavities to secure IP67
- · Additional protection of cabling and electronics
- · Special covers that protect cavities
- Well-proven connectors
- Nickel coated tool flange
- Rust preventives on screws, washers and unpainted/machined surfaces
- Extended service and maintenance program

1.1.1 Introduction *Continued*

The Foundry Plus 2 robot can be cleaned with appropriate washing equipment according to the robot product manual. Appropriate cleaning and maintenance is required to maintain the protection, for example can rust preventive be washed off with wrong cleaning method.

Available robot versions

The option Foundry Plus 2 might not be available for all robot versions.

See *Specification of variants and options on page 39* for robot versions and other options not selectable together with Foundry Plus 2.

Protection type Clean Room



xx0900000435

The illustration above is a sample of an IPA certified lable.

Robots with the option Clean Room are classified for clean room class 6 according to ISO 14644-1.

The Clean Room robots are protected with a paint appropriate for clean room applications. The paint has been tested regarding outgassing of Volatile Organic Compounds (VOC) and been classified in accordance with ISO 14644-8.

Classification of airborne molecular contamination, see below:

Parameter			Outgassing amount			
Area (m²)	Test dur- ation (s)	Tem- perat- ure (°C)	Per- formed test	Total detec- ted (ng)		Classification in ac- cordance with ISO 14644-8
4.5E-03	3600	23	туос	2848	1.7E-07	-6.8
4.5E-03	60	90	туос	46524	1.7E-04	-3.8

Classification results in accordance with ISO 14644-8 at different test temperatures. See *Specification of variants and options on page 39* for options that are not selectable together with the option Clean Room.

Operating system

The robot is equipped with the IRC5 controller and robot control software, RobotWare. RobotWare supports every aspect of the robot system, such as motion control, development and execution of application programs, communication etc. See *Product specification - Controller software IRC5*, and *Product specification - Controller IRC5 with FlexPendant*.

Safety


Safety standards valid for complete robot, manipulator and controller.

1.1.1 Introduction Continued

Additional functionality

For additional functionality, the robot can be equipped with optional software for application support - for example gluing and welding, communication features - network communication - and advanced functions such as multitasking, sensor control etc. For a complete description on optional software. See *Product specification - Controller software IRC5*.

Manipulator axes

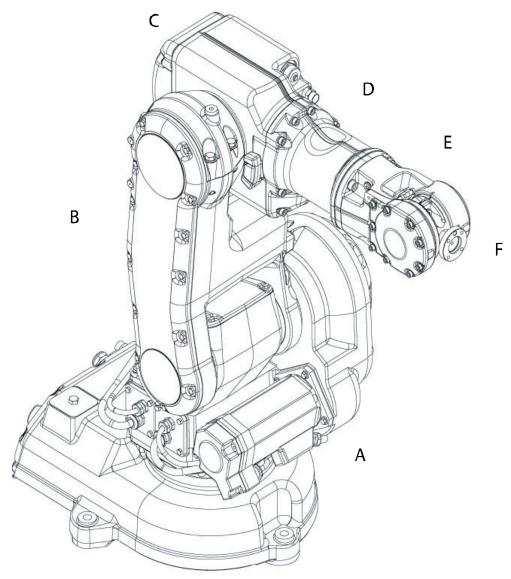

Posi- tion	Description	Posi- tion	Description
Α	Axis 1	в	Axis 2
С	Axis 3	D	Axis 4
E	Axis 5	F	Axis 6

1.1.2 Different robot versions

1.1.2 Different robot versions

General

The IRB 140-6/0.8 is available in two versions and all can be mounted on floor, inverted or on wall in any angle (tilted around X or Y axis). The high speed variant, IRB 140T, provides further reduced cycle time:

Robot type	Handling capacity (kg)	Reach (m)
IRB 140	6 kg	0.8 m
IRB 140T	6 kg	0.8 m

Manipulator weight


Data	Description
Manipulator	98 kg (excluding the cables to the controller)

Other technical data

Data	Description	Note
	The sound pressure level outside	< 70 dB (A) Leq (acc. to the working space Machinery directive 2006/42/EG)

Power consumption

Speed (mm/s)	Power consumption (kW)
Max.	0.44
1000	0.39
500	0.36
100	0.34

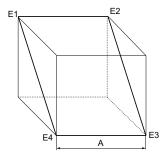

xx1000000101

Position	Description
A	250 mm


Path E-E2-E3-E4 in the ISO Cube, maximum load.

65

1.1.2 Different robot versions Continued

595

380

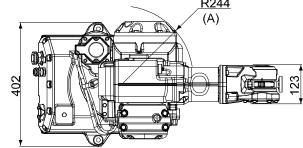

xx1000000864

Pos	Description
A	Minimum turning radius

Dimensions IRB 140

1.2.1 Applicable standards

1.2 Standards

1.2.1 Applicable standards



The listed standards are valid at the time of the release of this document. Phased out or replaced standards are removed from the list when needed.

Standards, EN ISO

The product is designed in accordance with the requirements of:

Standard	Description
EN ISO 12100:2010	Safety of machinery - General principles for design - Risk as- sessment and risk reduction
EN ISO 13849-1:2015	Safety of machinery, safety related parts of control systems - Part 1: General principles for design
EN ISO 13850:2015	Safety of machinery - Emergency stop - Principles for design
EN ISO 10218-1:2011	Robots for industrial environments - Safety requirements -Part 1 Robot
ISO 9787:2013	Robots and robotic devices Coordinate systems and motion nomenclatures
ISO 9283:1998	Manipulating industrial robots, performance criteria, and related test methods
EN ISO 14644-1:2015 ⁱ	Classification of air cleanliness
EN ISO 13732-1:2008	Ergonomics of the thermal environment - Part 1
EN 61000-6-4:2007 + A1:2011 IEC 61000-6-4:2006 + A1:2010 (option 129-1)	EMC, Generic emission
EN 61000-6-2:2005 IEC 61000-6-2:2005	EMC, Generic immunity
EN IEC 60974-1:2012 ⁱⁱ	Arc welding equipment - Part 1: Welding power sources
EN IEC 60974-10:2014 ^{<i>ii</i>}	Arc welding equipment - Part 10: EMC requirements
EN IEC 60204-1:2006	Safety of machinery - Electrical equipment of machines - Part 1 General requirements
IEC 60529:1989 + A2:2013	Degrees of protection provided by enclosures (IP code)
Only robots with protection Clean Room.	

Only robots with protection Clean Room.

ii Only valid for arc welding robots. Replaces EN IEC 61000-6-4 for arc welding robots.

European standards

Standard	Description
EN 614-1:2006 + A1:2009	Safety of machinery - Ergonomic design principles - Part 1: Terminology and general principles

1.2.1 Applicable standards *Continued*

Standard	Description
EN 574:1996 + A1:2008	Safety of machinery - Two-hand control devices - Functional aspects - Principles for design

Other standards

Standard	Description
ANSI/RIA R15.06	Safety requirements for industrial robots and robot systems
ANSI/UL 1740	Safety standard for robots and robotic equipment
CAN/CSA Z 434-14	Industrial robots and robot Systems - General safety require- ments

1.3.1 Introduction

1.3 Installation

1.3.1 Introduction

General

IRB 140 is available in four different environmental adapted variants, one for normal industrial environment, one for foundry, one for other harsh environments, and one for clean room environments. An end effector, weighing a maximum of 6 kg, including payload, can be mounted on the robot's mounting flange (axis 6). Other equipment, weighing a maximum of 1.5 kg, can be mounted on the upper arm. For more information about mounting of extra equipment, see Figure in *Holes for mounting of extra equipment on page 26*.

1.3.2 Operating requirements

1.3.2 Operating requirements

General

Robot version/ Protection standard	IEC60529
All variants, manipulator	IP67

Steam washable

The Foundry Plus and SteamWash versions are steam washable.

Clean room standards

Clean room manipulator ISO 14644-1 class 6.

Explosive environments

The robot must not be located or operated in an explosive environment.

Ambient temperature

Description	Standard/Option	Temperature
Manipulator during opera- tion	Standard	+ 5°C ⁱ (41°F) to + 45°C (113°F)
For the controller	Standard/Option	See Product specification - Control- ler IRC5 with FlexPendant
Complete robot during transportation and storage	Standard	- 25°C (-13°F) to + 55°C (131°F)
For short periods (not ex- ceeding 24 hours)	Standard	up to + 70°C (158°F)

i At low environmental temperature < 10° C is, as with any other machine, a warm-up phase recommended to be run with the robot. Otherwise there is a risk that the robot stops or run with lower performance due to temperature dependent oil and grease viscosity.

Relative humidity

Description	Relative humidity
Complete robot during transportation and storage	Max. 95% at constant temperature
Complete robot during operation	Max. 95% at constant temperature

Mounting the manipulator

Maximum load in relation to the base coordinate system. See figures below:

Floor Mounted

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	± 1020 N	± 2000 N
Force z	- 1000 ± 620 N	- 1000 ± 1250 N
Torque xy	± 700 Nm	± 1500 Nm
Torque z	± 250 Nm	± 470 Nm


1.3.2 Operating requirements *Continued*

Wall Mounted


Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	± 1750 N	± 2800 N
Force z	± 850 N	± 1600 N
Torque xy	± 1020 Nm	± 1710 Nm
Torque z	± 250 Nm	± 485 Nm

Suspended

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	± 1020 N	± 2000 N
Force z	+ 1000 ± 620 N	+ 1000 ± 1250 N
Torque xy	± 700 Nm	± 1500 Nm
Torque z	± 250 Nm	± 470 Nm

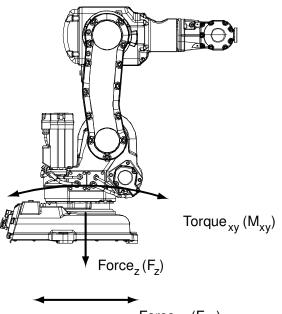



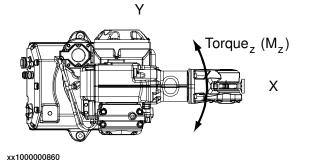

Continues on next page


1.3.2 Operating requirements *Continued*

Note regarding M_{xy} and F_{xy}

The bending torque (M_{xy}) can occur in any direction in the XY-plane of the base coordinate system.


The same applies to the transverse force (F_{xy}).

Illustration

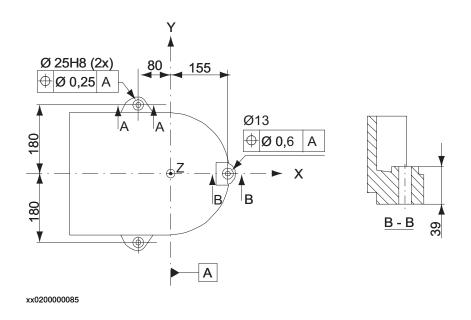

19

1.3.2 Operating requirements *Continued*

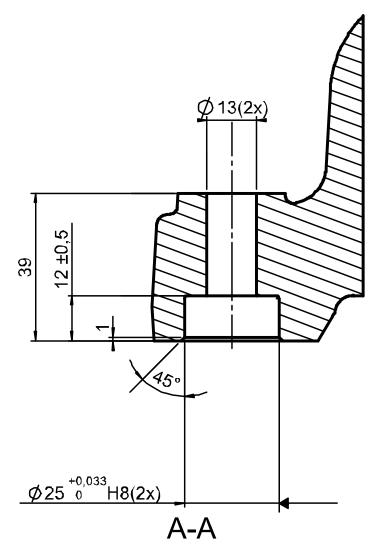

xx020000086

Attachment bolts, specification

The table below specifies the type of securing screws and washers to be used for securing the robot to the base/foundation.

Specification	Description
Suitable screws, lightly lubricated:	M12
Quality	8.8
Suitable washers:	Thickness: 2.5 mm Outer diameter: 24 mm Inner diameter: 13.4 mm
Tightening torque:	85 Nm



When the robot is to be mounted in a tilted or a suspended position, the guide sleeves must be used to secure the bolted joint.

1.4 Load diagram

1.4.1 Introduction

Information



It is very important to always define correct actual load data and correct payload of the robot. Incorrect definitions of load data can result in overloading of the robot.

If incorrect load data and/or loads are outside load diagram is used the following parts can be damaged due to overload:

- motors
- gearboxes
- mechanical structure



In the robot system there is a service routine called *LoadIdentify* available, which allows the user to make an automatic definition of the tool and load, to determine correct load parameters. See *Operating manual - IRC5 with FlexPendant*.



Robots running with incorrect load data and/or with loads outside diagram, will not be covered by robot warranty.

General

The load diagram includes a nominal pay load inertia, J_0 of 0.012 kgm². At different moment of inertia the load diagram will be changed. For robots that are allowed tilted, wall or inverted mounted, the load diagrams as given are valid and thus it is also possible to use RobotLoad within those tilt and axis limits.

Control of load case by "RobotLoad"

To easily control a specific load case, use the calculation program ABB RobotLoad. Contact your local ABB organization for more information.


The result from RobotLoad is only valid within the maximum loads and tilt angles. There is no warning if the maximum permitted armload is exceeded. For over load cases and special applications, contact ABB for further analysis. 1.4.2 Diagrams

1.4.2 Diagrams

Introduction

The robot is optimized for the rated load according to the load diagram and rated moment of inertia. These have been used in the performance tests. The maximum allowed load and moment of inertia are received from the formulas in the table below Figure below.



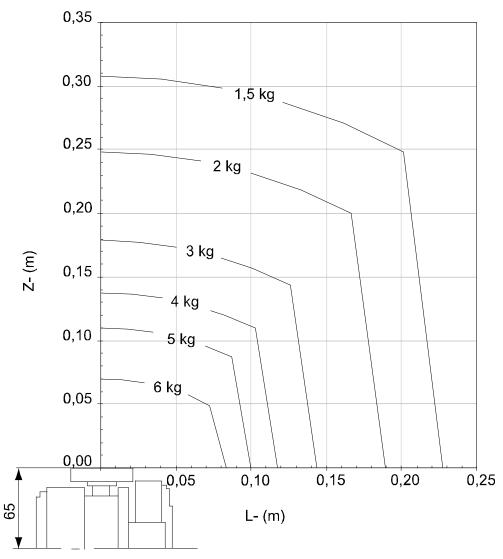

	Description
z	See the above diagram and the coordinate system in the Product specification - IRC5 with FlexPendant
L	Distance in X-Y plane from Z-axis to the center of gravity
J ₀	Rated own moment of inertia on the total handle weight = 0.012 kgm^2

1.4.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement


1.4.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement

General

Total load given as: Mass in kg, center of gravity (Z and L) in m and moment of inertia (J_{ox}, J_{oy}, J_{ox}) in kgm². L= ÷(X2 + Y2), see Figure below.

Full movement of Axis 5 (±115^o)

Axis	Robot Type	Max. value
5	IRB 140(T)-6/0.8	$J_5 = Mass \; x \; ((Z + 0.065)^2 \; + \; L^2) \; + \; max \; (J_{ox}, \; J_{oy}) \leq 0.42 \; kgm^2$
6	IRB 140(T)-6/0.8	$J_6\text{=}\text{ Mass x L2} + J_{0Z} \leq 0.30 \text{ kgm}^2$



xx1000000866

Pos	Description		
Α	Center of gravity		
	Description		
Jox, Joy, Joz	Max. moment of inertia around the X, Y and Z axes at center of gravity.		

Wrist torque

The table below shows the maximum permissible torque due to payload.

Note

The values are for reference only, and should not be used for calculating permitted load offset (position of center of gravity) within the load diagram, since those also are limited by main axes torques as well as dynamic loads. Also arm loads will influence the permitted load diagram. For finding the absolute limits of the load diagram, please use the ABB RobotLoad. Please contact your local ABB organization.

Robot type	Max wrist torque	Max wrist torque	Max torque valid at
	axis 4 and 5	axis 6	load
IRB 140(T)-6/0.8	8.58 Nm	4.91 Nm	5 kg

1.4.4 Maximum TCP acceleration

1.4.4 Maximum TCP acceleration

General

Higher values can be reached with lower loads than the nominal because of our dynamical motion control QuickMove2. For specific values in the unique customer cycle, or for robots not listed in the table below, we recommend then to use RobotStudio.

Maximum Cartesian design acceleration for nominal loads

Robot ty	De E-stop Max acceleration at nom COG [m/s ²]	Controlled Motion inal load Max acceleration at nominal load COG [m/s ²]
IRB 1401	110	57



Acceleration levels for E-stop and controlled motion includes acceleration due to gravitational forces. Nominal load is define with nominal mass and cog with max offset in Z and L (see load diagram).


1.5.1 Introduction

1.5 Mounting of equipment

1.5.1 Introduction

General

Extra loads can be mounted on to the wrist and on to the upper arm housing. Definitions of load areas and permitted load are shown in Figure below. The center of gravity of the extra load shall be within the marked load areas. The robot is supplied with holes for mounting of extra equipment.

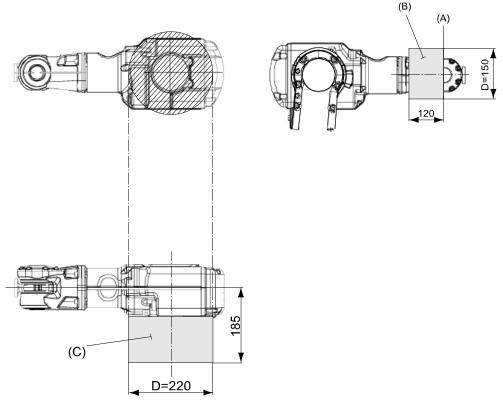


Position	Description
A	Center line of Axis 5
В	Maximum 0.5 kg when 1.0 kg on to the upper arm house 0 kg when 1.5 kg on to the upper arm house
С	Maximum 1 kg when 0.5 kg on to the wrist 1.5 kg when 0 kg on to the wrist

1.5.2 Holes for mounting of extra equipment


1.5.2 Holes for mounting of extra equipment

Wrist design IRB 140 IRC5

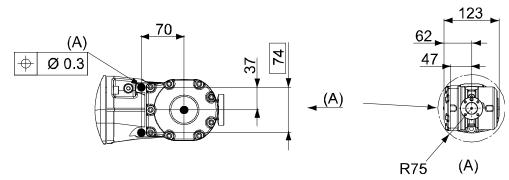


xx100000868

Wrist design IRB 140 IRC5, Type C

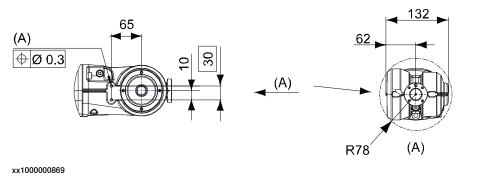


Upper arm housing

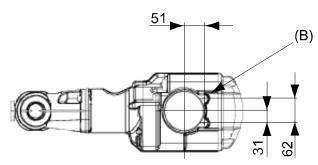

Position	Description
A	Design until September 2006: 2x M5 depth 7.5, Mounting holes for equipment. Design after September 2006, Type C: 2x M6 depth 10, Mounting holes for equipment.
в	2x M5 depth 7.5, Mounting holes for equipment.

1.5.2 Holes for mounting of extra equipment *Continued*

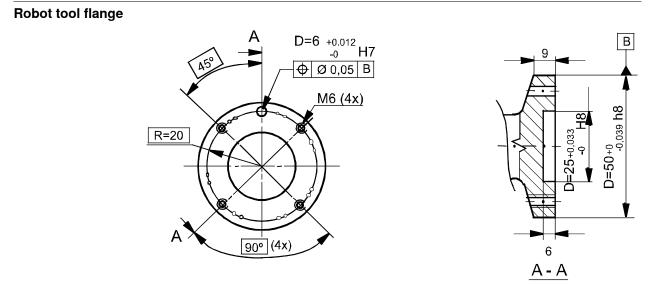


1.6.1 Fine calibration

1.6 Calibration and references

1.6.1 Fine calibration

General

Fine calibration is made using the Calibration Pendulum, see *Operating manual* - *Calibration Pendulum*.

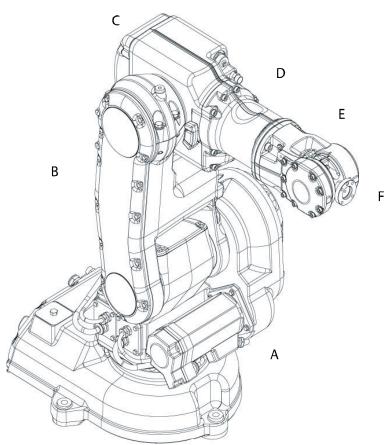

xx1000000859

Pos	Description	Pos	Description
А	Axis 1	В	Axis 2
С	Axis 3	D	Axis 4
Е	Axis 5	F	Axis 6

Calibration


Calibration	Position	
Calibration of all axes	All axes are in zero position	
Calibration of axis 1 and 2	Axis 1 and 2 in zero position	
	Axis 3 to 6 in any position	
Calibration of axis 1	Axis 1 in zero position	
	Axis 2 to 6 in any position	

1.6.2 Absolute Accuracy calibration

General	
	Requires RobotWare option Absolute Accuracy, see Product
	specification - Controller software IRC5 for details.
The calibration co	oncept
	<i>Absolute Accuracy</i> (AbsAcc) is a calibration concept, which ensures a TCP absolut accuracy of better than ± 1 mm in the entire working range.
	Absolute accuracy compensates for:
	 Mechanical tolerances in the robot structure
	Deflection due to load
	Absolute accuracy calibration is focusing on positioning accuracy in the cartesia coordinate system for the robot. It also includes load compensation for deflectio caused by the tool and equipment. Tool data from robot program is used for this purpose. The positioning will be within specified performance regardless of load
Calibration data	
	The user is supplied with robot calibration data (compensation parameters save on the manipulator SMB) and a certificate that shows the performance (Birth certificate). The difference between an ideal robot and a real robot without AbsAc may reach up to 8 mm, resulting from mechanical tolerances and deflection in th robot structure.
	If there is a difference, at first start-up, between calibration data in controller and the robot SMB, correct by copying data from SMB to controller.
Absolute Accurac	ey option
	The option <i>Absolute Accuracy</i> is integrated in the controller algorithms for compensation of this difference and does not need external equipment or calculation.
	Absolute Accuracy is a RobotWare option and includes an individual calibration of the robot (mechanical arm).

29

1.6.2 Absolute Accuracy calibration *Continued*

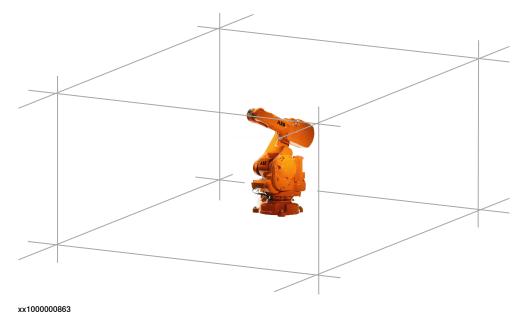

Absolute Accuracy is a TCP calibration in order to reach a good positioning in the Cartesian coordinate system.

Production data

Typical production data regarding calibration are:

Robot	Positioning accuracy (mm)			
	Average	Max	% Within 1 mm	
IRB 140(T)-6/0.8	0,35	0,75	100	

1.7.1 Introduction

1.7 Maintenance and troubleshooting

1.7.1 Introduction

General

The robot requires only a minimum of maintenance during operation. It has been designed to make it as easy to service as possible:

- Maintenance-free AC motors are used.
- Oil is used for all gear boxes.
- The cabling is routed for longevity, and in the unlikely event of a failure, its modular design makes it easy to change.
- It has a program memory "battery low" alarm.

Maintenance

The maintenance intervals depend on the use of the robot, the required maintenance activities also depends on selected options. For detailed information on maintenance procedures, see Maintenance section in the Product Manual.

1.8.1 Introduction

1.8 Robot motion


1.8.1 Introduction

General

Type of motion	Range of movement	
Axis 1: Rotation motion	+ 180° to - 180°	
Axis 2: Arm motion	+ 110° to - 90°	
Axis 3: Arm motion	+ 50° to - 230°	
Axis 4: Wrist motion	+ 200° to - 200° Default + 165 revolutions to - 165 revolutions Max. ⁱ	
Axis 5: Bend motion	+ 115° to - 115°	
Axis 6: Turn motion	+ 400° to - 400° Default + 163 revolutions to -163 revolutions Max. <i>i</i>	

ⁱ The default working range for axis 4 and axis 6 can be extended by changing parameter values in the software.

Option 610-1 *Independent axis* can be used for resetting the revolution counter after the axis has been rotated (no need for "rewinding" the axis).

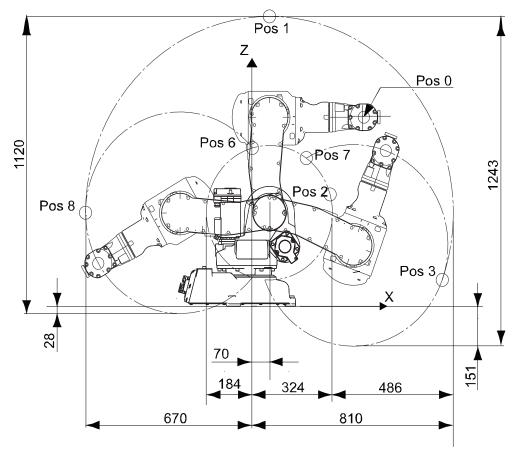

1.8.1 Introduction Continued

Position (see Fig- ure 12)	Position (mm) X	Position (mm) Z	Angle (degrees) Axis 2	Angle (degrees) Axis 3
0	450	712	0	0
1	70	1092	0	-90
2	314	421	0	+50
3	765	99	110	-90
6	1	596	-90	+50
7	218	558	110	-230
8	-670	352	-90	-90


1.8.2 Performance according to ISO 9283

1.8.2 Performance according to ISO 9283

General

At rated maximum load, maximum offset and 1.6 m/s velocity on the inclined ISO test plane, with all six axes in motion. Values in the table below are the average result of measurements on a small number of robots. The result may differ depending on where in the working range the robot is positioning, velocity, arm configuration, from which direction the position is approached, the load direction of the arm system. Backlashes in gearboxes also affect the result.

The figures for AP, RP, AT and RT are measured according to figure below.

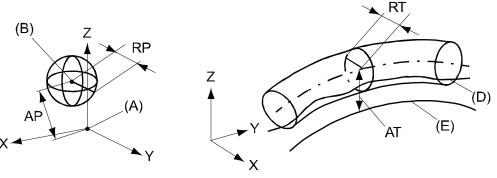

xx0800000424

Position	Description	Position	Description
A	Programmed position	E	Programmed path
В	Mean position at program execution	D	Actual path at program execution
AP	Mean distance from pro- grammed position	AT	Max deviation from E to average path
RP	Tolerance of position B at re- peated positioning	RT	Tolerance of the path at repeated program execution

Description	Values	
IRB	140-6/0.8 and 140T-6/0.8	
Pose repeatability, RP (mm)	0.03	
Pose accuracy, AP ⁱ (mm)	0.02	
Linear path repeatability, RT (mm)	0.08	
Linear path accuracy, AT (mm)	0.67	
Pose stabilization time, Pst (s) within 0.2 mm of the position	0.08	

AP according to the ISO test above, is the difference between the teached position (position manually modified in the cell) and the average position obtained during program execution.

The above values are the range of average test-results from a number of robots.

1.8.2 Performance according to ISO 9283 Continued

Typical values for conveyor tracking

All values measured with PickMaster and IRC5.

Constant conveyor speed (mm/s)	Repeatability (mm)
100	0.4
300	0.7
Start/stop conveyor (mm/s)	Repeatability (mm)
300 (start/stop in 0.5 sec.)	0.7

1.8.3 Velocity

1.8.3 Velocity

3-phase power supply

Axis No.	IRB 140-6/0.8	IRB 140T-6/0.8
1	200°/s	250°/s
2	200°/s	250°/s
3	260°/s	260°/s
4	360°/s	360°/s
5	360°/s	360°/s
6	450°/s	450°/s

1-phase power supply

When the robot uses a single phase power supply, like with IRC5 Compact controller, the performance regarding max axis speed is reduced, see table below. The reduced top speed can be increased if the power supply minimum voltage is higher than the default setting 187 V (220x0.85). See the system parameter *Mains tolerance min*, in *Technical reference manual - System parameters*.

Note that the robot acceleration is not affected by the single phase power supply. Thus the cycle time may not be affected at all. RobotStudio can be used to test the cycle. The parameter *Mains tolerance min* can also be modified in RobotStudio.

Axis No.	IRB 140-6/0.8	IRB 140T-6/0.8
1	200°/s	229°/s
2	200°/s	228°/s
3	245°/s	245°/s
4	348°/s	348°/s
5	360°/s	360°/s
6	450°/s	450°/s

Resolution

Approximately 0.01 ° on each axis.

1.8.4 Robot stopping distances and times

1.8.4 Robot stopping distances and times

Introduction

The stopping distances and times for category 0 and category 1 stops, as required by EN ISO 10218-1 Annex B, are listed in *Product specification - Robot stopping distances according to ISO 10218-1 (3HAC048645-001)*.

1.8.5 Signals

1.8.5 Signals

Signal connections on robot arm

To connect extra equipment on the manipulator, there are cables integrated into the manipulator's cabling from the controller to the upper arm housing.

In the controller, the signals are connected to 12-pole terminals, Phoenix MSTB 2.5/12-ST-5.08, and on the upper arm housing to FCI UT07 14 12SH44N.

Hose for compressed air is also integrated into the manipulator. There is an inlet (R1/4") at the base and an outlet (R1/4") on the upper arm housing.

Description	Number	Values
Signals	12	49 V, 500 mA
Air	1	Max. 8 bar, inner hose diameter 6.5 mm

2.1 Introduction to variants and options

2 Specification of variants and options

2.1 Introduction to variants and options

	The different enders the state of a discrete LDD 440 and the discrete discrete the following
	The different variants and options for the IRB 140 are described in the following sections. The same option numbers are used here as in the specification form.
Related information	
	For the controller see Product specification - Controller IRC5.
	For the software options see Product specification - Controller software IRC5.

2 Specification of variants and options

2.2 Manipulator

2.2 Manipulator

Variants

Option	Variant	Robots
435-87	Standard performance variant	IRB 140-6/0.8
435-88	High speed variant	IRB 140T-6/0.8

Manipulator color

Option	Description	Note
209-1	ABB Orange standard	
209-2	ABB White standard	
209-202	ABB Graphite White standard Standard color	
209-4192	The manipulator is painted with the chosen RAL- color	

Note

Notice that delivery time for painted spare parts will increase for none standard colors.

Protection types

Option	Protection type	Note
287-4	Standard	IP 67
287-3	Foundry Plus 2	See <i>Protection type Foundry Plus 2 on page 9</i> for a complete description of protection type Foundry Plus 2.
287-1	Clean Room	Robot with protection type Clean Room fulfil class 6 accord- ing to ISO 14644-1.
		See <i>Protection type Clean Room on page 10</i> for a complete description of protection type Clean Room.
		The robot is labeled with "Clean Room".
287-5	SteamWash	Robot with the same protection as in option 287-3 Foundry Plus 2.

Connector kit

Option	Description	
431-1	Detached connectors, suitable to the connectors on the upper arm.	
	The kit consists of connectors, pins and sockets.	

2.2 Manipulator Continued

Safety lamp

Option	Description
213-1	Safety lamp A safety lamp with an orange fixed light can be mounted on the manipulator.
	The lamp is active in MOTORS ON mode.
	The safety lamp is required on a UL/UR approved robot.

Warranty

ths dard warranty + 18 ths	Standard warranty is 12 months from <i>Customer Delivery</i> <i>Date</i> or latest 18 months after <i>Factory Shipment Date</i> , whichever occurs first. Warranty terms and conditions apply. Standard warranty extended with 12 months from end date of the standard warranty. Warranty terms and con- ditions apply. Contact Customer Service in case of other requirements. Standard warranty extended with 18 months from end date of the standard warranty. Warranty terms and con- ditions apply. Contact Customer Service in case of other requirements. Standard warranty extended with 18 months from end date of the standard warranty. Warranty terms and con- ditions apply. Contact Customer Service in case of other requirements. Standard warranty extended with 24 months from end date of the standard warranty. Warranty terms and con- ditions apply. Contact Customer Service in case of other
ths dard warranty + 18 ths dard warranty + 24	date of the standard warranty. Warranty terms and con- ditions apply. Contact Customer Service in case of other requirements. Standard warranty extended with 18 months from end date of the standard warranty. Warranty terms and con- ditions apply. Contact Customer Service in case of other requirements. Standard warranty extended with 24 months from end date of the standard warranty. Warranty terms and con-
ths dard warranty + 24	date of the standard warranty. Warranty terms and con- ditions apply. Contact Customer Service in case of other requirements. Standard warranty extended with 24 months from end date of the standard warranty. Warranty terms and con-
	date of the standard warranty. Warranty terms and con-
	requirements.
dard warranty + 6 ths	Standard warranty extended with 6 months from end date of the standard warranty. Warranty terms and conditions apply.
dard warranty + 30 ths	Standard warranty extended with 30 months from end date of the standard warranty. Warranty terms and conditions apply.
k warranty	Maximum 6 months postponed start of standard war- ranty, starting from factory shipment date. Note that no claims will be accepted for warranties that occurred be- fore the end of stock warranty. Standard warranty com- mences automatically after 6 months from <i>Factory</i> <i>Shipment Date</i> or from activation date of standard war- ranty in WebConfig.
	Note Special conditions are applicable, see <i>Robotics Warranty</i>
ŀ	« warranty

2.3 Floor cables

2.3 Floor cables

Manipulator cable length

Option	Lengths
210-1	3 m
210-2	7 m
210-3	15 m
210-4	22 m
210-5	30 m

2.4 Process

2.4 Process

Process module

Option	Туре	Description
768-1	Empty cabinet small	Product specification - Controller IRC5
768-2	Empty cabinet large	Product specification - Controller IRC5
715-1	Installation kit	Product specification - Controller IRC5

2.5 User documentation

2.5 User documentation

User documentation

The user documentation describes the robot in detail, including service and safety instructions.

All documents can be found via myABB Business Portal, www.myportal.abb.com.

3.1 Introduction to accessories

3 Accessories

3.1 Introduction to accessories

General	There is a range of tools and equipment available.
Basic software an	d software options for robot and PC
	For more information, see <i>Product specification - Controller IRC5</i> and <i>Product specification - Controller software IRC5</i> .
Robot peripherals	

• Motor Units¹

¹ Not applicable for IRC5 Compact controller.

This page is intentionally left blank

Index

Α

accessories, 45

C Calibration Pendulum, 28 category 0 stop, 37 category 1 stop, 37

D documentation, 44

F fine calibration, 28

l instructions, 44

M manuals, 44

O options, 39 Ρ

product standards, 14 S safety standards, 14 service instructions, 44 standards, 14 ANSI, 15 CAN, 15 EN, 14 EN IEC, 14 EN ISO, 14 standard warranty, 41 stock warranty, 41 stock warranty, 41 stopping distances, 37 stopping times, 37 U user documentation, 44 V variants, 39

W warranty, 41



ABB AB, Robotics Robotics and Motion S-721 68 VÄSTERÅS, Sweden Telephone +46 (0) 21 344 400

ABB AS, Robotics Robotics and Motion Nordlysvegen 7, N-4340 BRYNE, Norway Box 265, N-4349 BRYNE, Norway Telephone: +47 22 87 2000

ABB Engineering (Shanghai) Ltd. Robotics and Motion No. 4528 Kangxin Highway PuDong District SHANGHAI 201319, China Telephone: +86 21 6105 6666

ABB Inc. Robotics and Motion 1250 Brown Road Auburn Hills, MI 48326 USA Telephone: +1 248 391 9000

abb.com/robotics